

E-1 Tripod Easel

Upgrade Kit Instructions

Elastic Peg Strap Installation

This install process requires the cutout template provided on the bottom right of this sheet. Place the template fold line on the top edge of the easel back (the template sheet should cover the *Chapel Craft* stamp). Secure with tape if needed. Using the 3/64" Drill Bit (H), carefully drill three pilot holes 1/4" deep where the + is marked on the template.

Remove the template and install the preconfigured Elastic Strap with Tacks (C). A hammer can be used to lightly tap on the tacks for firm securement. An extra Tack (D) is provided if one should break.

Carry Handle Installation

From the back bottom edge of the center easel leg measure 38" up and make a mark. Try to center the mark between the leg edges. This mark represents the first hole on the handle top bracket. Using the 1/8" Drill Bit (G), drill a 1/4" deep pilot hole on the mark.

Place a Screw (B) in the first hole of the top handle bracket. Secure the bracket with a phillips screwdriver using the pilot hole. Be sure to line the handle up properly with the leg. Once the handle is attached securely, drill the remaining three pilot holes 1/4" deep and secure accordingly with a Screw (B) using a phillips screwdriver.

Velcro Leg Strap Installation


From the back bottom edge of the center easel leg measure 6" up and make a mark. Try to center the mark between the leg edges. This mark represents the Snap End (F) of the velcro strap. Using the 1/8" Drill Bit (G) drill a 1/4" deep pilot hole on the mark. Secure the Snap End (F) into the pilot hole using a phillips screwdriver.

Attach the Velcro Strap with Snap (E) to the Snap End (F).



Kit Includes:

- 1 - Handle (A)
- 1 - Preconfigured Elastic Strap with Tacks (C)
- 4 - Handle Screws (B)
- 1 - Extra Tack (D)
- 1 - Velcro Strap with Snap (E)
- 1 - Snap End (F)
- 1 - 1/8" Drill Bit (G)
- 1 - 3/64" Drill Bit (H)

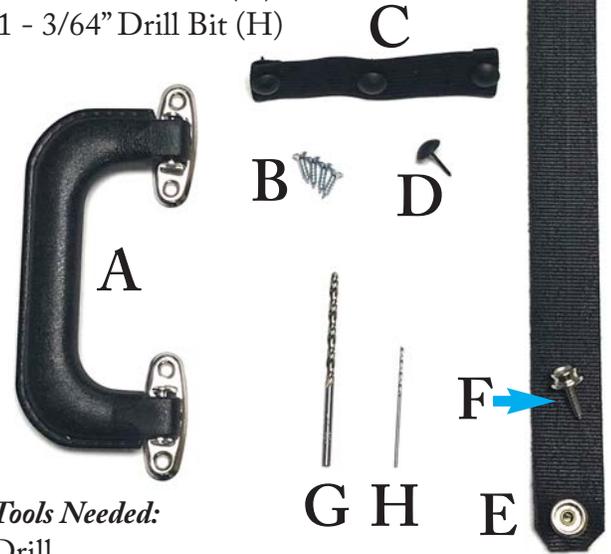

Tools Needed:

- Drill
- Hammer
- Phillips Screwdriver

